
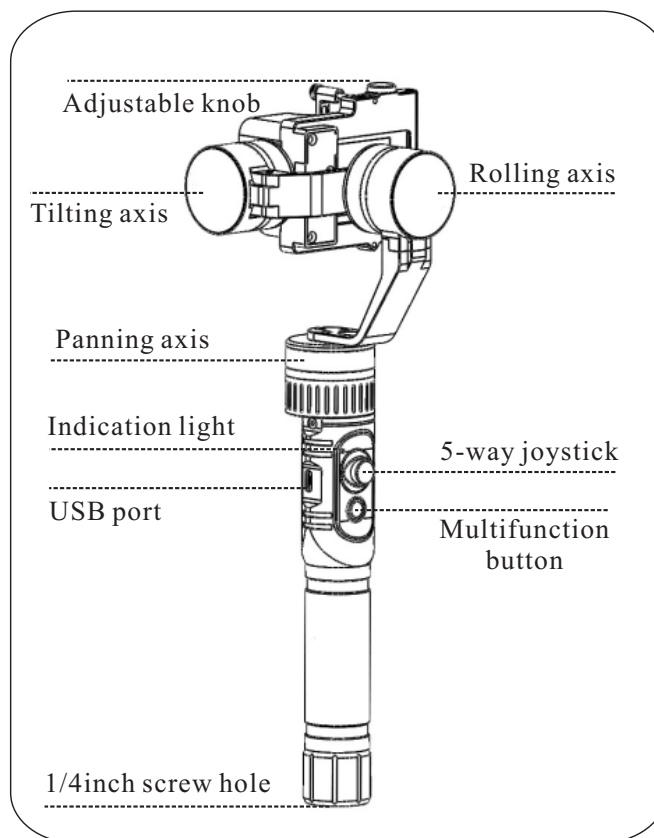


### 1. Product Overview

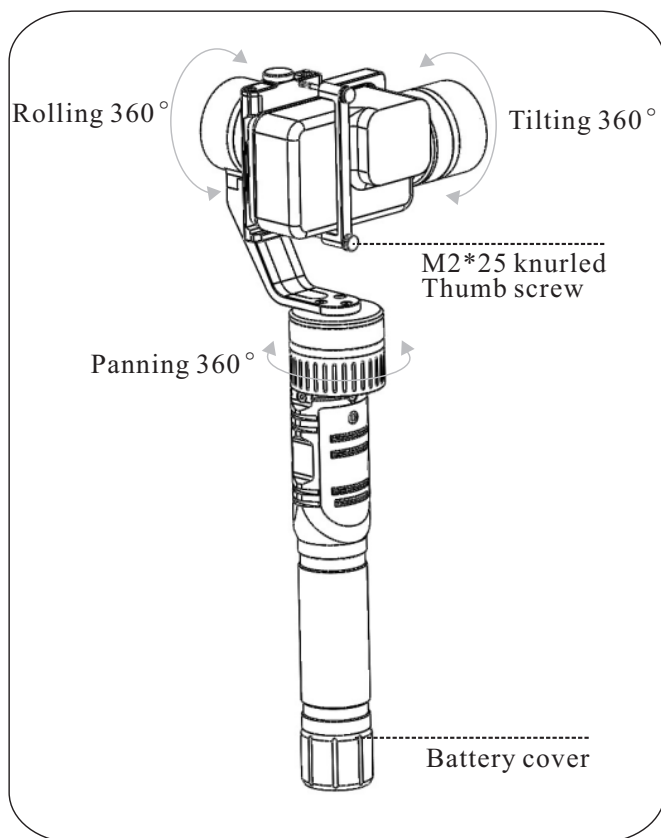

### Accessories

#### \*Standard

- ① 18650 Rechargeable Battery\*1
- ② Micro USB Cable\*1
- ③ User Manual\*1
- ④ Warranty Card\*1

#### \*Optional


- ① Telescopic
- ② Tripod
- ③ Bike mount

### 2. User Guide

Attention ! Please confirm the camera has been installed well before power on the gimbal.




- ① Install Hohem GimSet  
Search for 'Hohem Studio' in the App Store or Google Play, and install the app on your mobile phone.  
\* 'Hohem GimSet' supports iOS 8.0 and Android 4.4 or above.

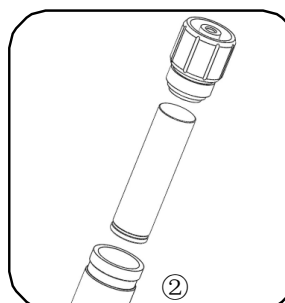

- ② Prepare the battery  
Fully charge the battery before using it for the first time.  
\* Please insert the battery as below shown.  
\* Charging: Using the standard USB CABLE Connecting to the gimbal charging port (or other power sources).


### ③ Mount and Balance the Action Camera

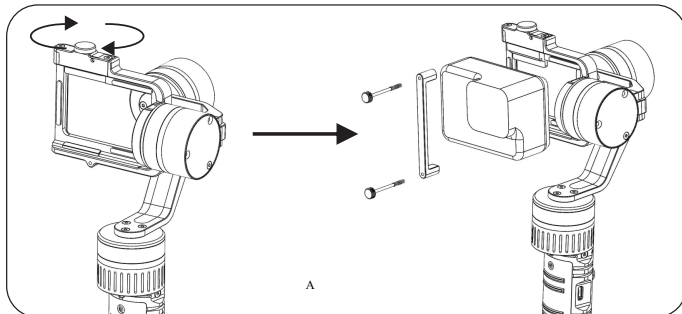

#### A. GoPro Hero 5

Step 1: Put the pitch motor to the RIGHT side, and rotating the adjustable knob by clockwise direction (Tighten if by opposite direction)


Step 2: Place GoPro Hero5 closely to the back clip as picture and tighten the knob to secure its position. Double tighten by the 2 long screws against violent movement.

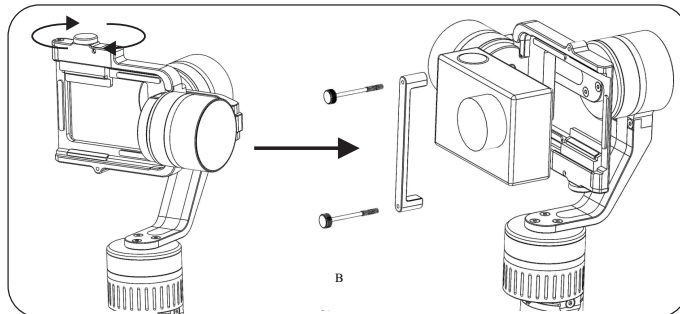


#### B. GoPro Hero 4/3/YI CAM/SJCAM etc.

Step 1: Put the pitch motor to the LEFT side and rotating the adjustable knob by clockwise direction (Tighten if by opposite direction)

Step 2: Place Hero4/3/YI/SJCAM etc closely to the clip as picture show and tighten the knob to secure its position. Double tighten by the 2 long screws against violent movement.

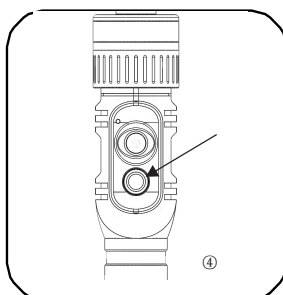

④ Power on  
Power on the Gimbal. Press the function button until the indicator flashing twice.

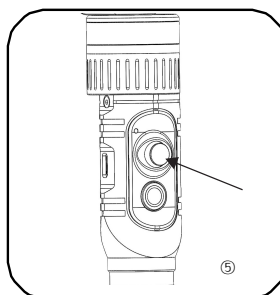


⑤ Mode switch  
You can switch to different working mode by pressing the 5-way joystick. Please refer to the following introduction.

## 3. Light Instruction

### Signal Indicator Light

- Flashes twice: Power on/off
- Turn off: Bluetooth is not connected

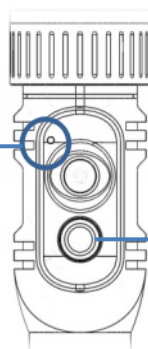


### Status Indicator Light

- Flashes once: Panning mode
- Flashes twice: Panning and pitching mode
- Flashes for three times: Lock mode
- Keeps flashing: Low battery

Charging status: If the status indicator light is flashing, means charging. If the light constants on, means charging is complete.


## 4. Controlling instruction

### 5-Way Joystick

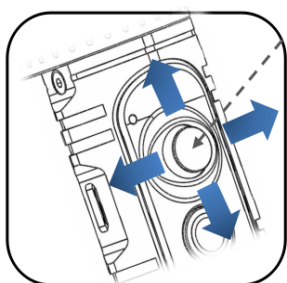

- Middle button: Switch the working mode
- Single Press: Panning Mode Following
- Double Press: Panning and Pitching Mode Following
- Triple Press: Lock Mode Following
- Long press for 6 seconds: Enter the initialization
- Left/Right: Panning angle adjustment

### Function Button

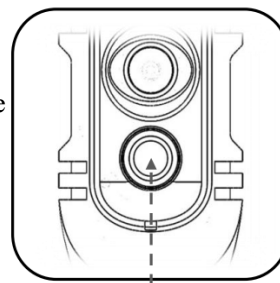

Long Press: Power on/off



\*Confirming the smartphone has connected the gimbal with bluetooth.

- A. Joystick controlling
- B. One click calibrating
- C. Setting: Follow Speed, Lock Speed, Rocker Speed, Blind Angle, Rocker Direction.
- D. Firmware Upgrade

\*More functions will upgrade, please expecting.

## 5. Product Parameters

Working Voltage	8.4V
Tilt Angle	360°
Pan Angle	360°
Roll Angle	360°
Tilt Speed	2°/s~100°/s
Pan Speed	2°/s ~ 150°/s
Overload Current Protection	1A
Package Size	270*193*63 mm
Handle Size	Length: 101mm      Outer Diameter: 25mm
Weight	289g(Without action camera and batteries )
Material	CNC Aluminum Alloy
Battery Life	2000mAh/4 Hours
Adaption	GoPro Hero5/4/3, YI CAM/SJCAM/AEE etc and other action cameras of the similar size.

## 6. Calibration

If the gimbal has the following situations, please calibrate it:

- ①The pitch angle is not leveled with the horizontal surface.
- ②The roll angle is not parallel to the horizontal surface.
- ③Under the lock mode, the panning angle drifting.

Calibration Operation Instruction:

Method 1: Off-line Calibration

- (1)Power on the gimbal(around 3 seconds),long press the middle button of the joystick over 6 seconds till the status indicator light is solid.
- (2)Lay the gimbal as following picture on a static flat surface, make sure it has no shaking. Calibration is finish when the status indicator light is continuously flashing for 3 times.
- (3)Power off the gimbal and restart it, if the calibration is unsuccessful, you can repeat step(1)(2)to reinitialize.

Method 2: On-line Calibration

Please visit our official website <http://www.hohem-tech.com>, and visit the SUPPORT to download the calibration software of HG5 Pro and operation introduction to calibrate the gimbal.

## 7. Firmware Upgrade

Please visit the official website <http://www.hohem-tech.com>, and visit the SUPPORT to download the USB driver software, the software of HG5 Pro firmware upgrade, the latest firmware and operation manual to Upgrade the firmware.

We provide various kinds of optional accessories for our gimbals. Please contact us for more information.

Email: [service@hohem-tech.com](mailto:service@hohem-tech.com).

## 8. Disclaimer

- ①Please install and use the product according to the manual!
  - ②Please use the standard battery charger!
  - ③Please reconfirm the gimbal and the smartphone are well installed before power on!
  - ④Keep the battery away from fire and heat source!
  - ⑤Prohibit any user for any illegal purpose. Users will be responsible for all behavior of purchasing and using the products.
  - ⑥For any unknown sources or usage, we will not provide any service.
  - ⑦ If there is any question, please contact the technician of Hohem Tech, we won't be responsible for any wrong operations by users.
  - ⑧Hohem Tech reserves the right for final explanation.
- 



Hohem Technology Co.,Ltd  
Http://www.hohem-tech.com  
Email: service@hohem-tech.com