

**Need support?
Have questions?
Have suggestions?
Let's talk.**

-  www.olfi.co.uk
-  info@olfi.co.uk
-  +44(0)1978 884327

Follow us

 facebook.com/olficamera

 twitter.com/olficamera

 youtube.com/olficamera

 instagram.com/olficamera

olfi® is a product by HEDCAMz™

Quick Start Guide



one.five

The Essential 4K Action Camera

#onelifefilmit

Thank you for purchasing your new Olfi Camera 2

The information in this document has been carefully checked for accuracy; however, no guarantee is given as to the correctness of the contents. This information is subject to change without notice. This document contains proprietary information protected by copyright. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission. All trademarks are the property of their respective owners. All Rights Reserved.

Safety Information

Please read the following safety instructions, and keep the user manual for future reference. Only handle the Olfi Camera when it is safe for you and for others. Do not place your Olfi Camera near sources of heat or near extremely high temperatures, as doing so could damage the housing and main components. Take care to only use the camera within its operating temperature range.

Camera Care

Clean your Olfi Camera with a soft cloth. Do not use abrasive powders or solvents.

Disclaimer

Olfi will not, under any circumstances, be responsible for injuries or property damage incurred during the use of its products. Olfi digital video cameras are exclusively intended for sports video recording and must be used in compliance with local copyright laws. The user assumes full responsibility for the use, reproduction and distribution of any sounds/images/videos captured with our devices.

Warranty

Your Olfi Camera has a 12 month manufacturers warranty. Should the camera malfunction due to misuse it will not be covered under warranty. Warranty does not apply if the product is damaged due to physical abuse, mishandling, accident, fire, frostbite, water damage, negligence or failure to follow the supplied operating instructions.

FCC Information

This device complies with Part 15 of the FCC Rules: It can be operated without causing harmful interference and it can accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INFORMATION FOR USERS according to European Directives 2002/95/EC and 2003/108/EC on the restriction of the use of hazardous substances in electrical and electronic equipment and waste disposal.

The symbol of the crossed-out wheeled bin printed on the packaging indicates that this product must be collected separately from other waste at the end of its working life. The user must hand the product over to a designated collected site for waste electrical and electronic equipment or return it to the retailer on a one-for-one basis when buying a new similar product. By correctly separating this product for recycling, processing or environmentally friendly disposal, you will be helping to prevent possible negative impacts on the environment and human health, and contributing to the recycling of its component materials.

Users who dispose of this product illegally may be liable to prosecution under applicable laws.




Package Contents 3




To view our full range of additional mounts and accessories please visit www.olfi.co.uk

About your Olfi Camera

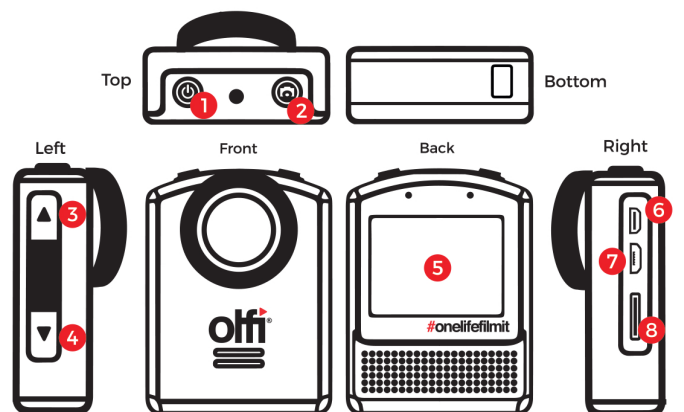

- 1 Power/Mode button
- 2 Shutter Button
- 3 Wi-Fi/Settings (up)
- 4 Settings (down)
- 5 Colour LCD Screen
- 6 Micro HDMI Port
- 7 Micro USB Port
- 8 MicroSD Card Slot

1. Remove the camera from the waterproof case.

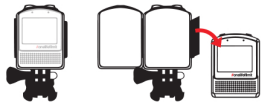

2. Insert a Class 10 or higher MicroSD card (up to 64GB). Selecting the Setup menu, scroll up to 'Format'. Format memory card inside the camera before first use.



3. Open the battery cover and insert the battery.



4. Charge the battery using the USB cable provided for 8 hours before first use.



Mounting

Flat Surface Mounting



Curved Surface Mounting



Applying 3M Base Mounts
Ensure adhesive mounts are applied to clean, smooth surfaces at room temperature. It is advisable to leave them at least 24 hours before first use. To remove, apply gentle heat with a hair dryer then peel off.

Power On/Off

1. Press and hold the Power/Mode Button for 3 seconds.



2. The rear LCD screen will power on and show the welcome screen (Olfii intro), followed by the last used mode.



3. To power off, press and hold the Power/Mode button for 2 seconds.



Changing Shooting Modes

1. With the camera turned on, press the Power/Mode button to cycle through the selected modes and main menu. (Example - In Photo/Video mode, you can cycle between photo, video and the main menu.)



2. When in the main menu, you can cycle through the available options using the settings buttons. To select and enter a mode or option, press the shutter button. (For more information on the various options and shooting modes, please see next page.)



Capturing Video/Stills

1. When in your selected shooting mode, press the shutter button to start/stop recording or take a photo.



Menu Structure

Adjusting Camera Settings

Video/Photo



Standard Video and Photo shooting modes.

Playback



Instantly review videos and photos saved to your memory card.

Video Lapse



Automatically creates a time lapse video shot over set intervals.

Slow Mo



Automatically creates a slow motion video file at set speeds. Not recommended for professional users.

Time Lapse



Takes a sequence of photos over set intervals.

Burst Mode



Takes a burst of up to 10 photos over 1 second.

Underwater



Automatically corrects for the loss of red light (colour) when diving.

FPV



Specific for use with aerial vehicles, drones and wireless transmitters.

Motion Detection



Automatically starts recording when motion is detected and stops 10 seconds after last movement.

Car Mode



Automatically starts loop recording when connected to power and stops 10 seconds after power is cut.

Remote Control



Setup and pair a new Olfii one.five remote control. (Remote control sold separately)

Setup



Adjust camera settings to suit your needs. Set date and time, Wi-Fi options and more.



Illustration of Main Menu



Illustration of Shortcut Menu

Your Olfii one.five has two different settings menus. The first is a setup menu, the second is a shortcut menu which reflects the shooting mode that you are currently using. The setup menu can be accessed by cycling through the main menu with the settings buttons until you reach "Setup". The shortcut menu can be accessed by pressing the bottom settings button when in your chosen shooting mode.

- Settings buttons will cycle through the options.
- Shutter button will select and confirm settings.
- Power/mode button will return to previous screen.

Review and Share

Computer
Connect the camera to your computer with the USB cable provided; the camera's LCD screen will show 'Mass Storage' and 'PC Camera'; select 'Mass Storage'; PC users open 'My Computer', Mac users navigate to 'Finder', the camera should be recognised as a removable disk; double click to open. Open the 'DCIM' folder to access your files.

TV
Connect your camera to a TV with a micro HDMI cable (sold separately). Power on the camera and choose the desired HDMI input on the TV, the TV will then display a live preview. Press the Power/Mode button until the HDMI logo appears on the camera LCD screen. You can now view content stored on the camera's memory card.

Smart Devices
Use the Olfii App to review and share your files on a smartphone or tablet. The app is available from the App Store and Google Play Store (may not be available at time of print).

Olfii App
The Olfii App will allow you to control your camera remotely using a smartphone, tablet or compatible wearable devices. Review and share your files across your favourite social media platforms. Download the Olfii App and open it on your smart device. Follow the app's on-screen instructions to connect your camera. As a default your Olfii's Wi-Fi password is '12345678'.

